




Flush Wood - Shadowbox Face



Flush Wood - Cypress Face

Now you can install a Lopi Flush Wood into a timber frame...

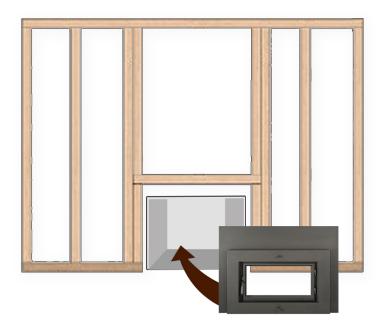


www.lopi.com.au



The Flush Wood Zero clearance box allows the product to be installed into a combustible wall with minimum clearances and without brick or block work using the framing dimensions and clearances below.

Zero Clearance Box Dimensions

Isometric View

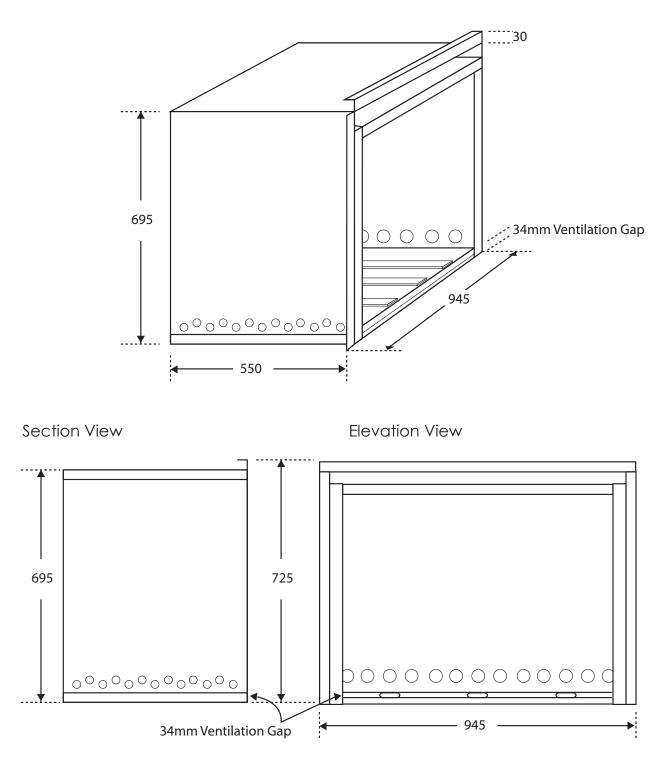

**Dimensions are subject to change at our discretion, please check with our office for further details



Zero Clearance Box Assembly Details

Step 1

Lay down bottom panel folded edges facing upwards and non folded edge to the front.



Step 3

Screw inner top panel in place.



Step 5

Screw outer left, outer right and outer Rear panels in place with vent holes to the bottom, returns facing outwards.



* Images for illustration purposes only, some details may change

Step 2

Screw inner left, inner right and inner back panels together, returns facing outwards.



Step 4

Screw 200mm collar in place.



Step 6

Screw outer top panel into place. 1 x large return facing upwards at the front, 3 x small returns facing downwards.



Dragon Wholesaling Pty Ltd | 2/16 Lexington Drive, Bella Vista NSW 2153 | Phone. (02) 8824 9122 Fax. (02) 8824 6487



Step 7

Screw 250mm collar in place



Note:


Short 150mm s/s length supplied to match height of triple skins.

Note 2:

Use plastic insulating covers where fan cord passes through inner and outer panels.





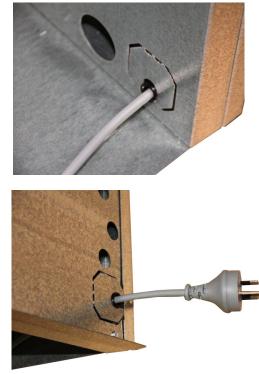

Triple skin flue must be installed from zero clearance box as per Australian Standards. A 25mm clearance from the outer 10" casing to any combustible material must be maintained.


Please see heater owners manual for other clearances and more information.

* Images for illustration purposes only, some details may change



Framing Dimensions for Zero Clearance Box - Flush Wood Only


Plan View - Timber or Concrete Floor

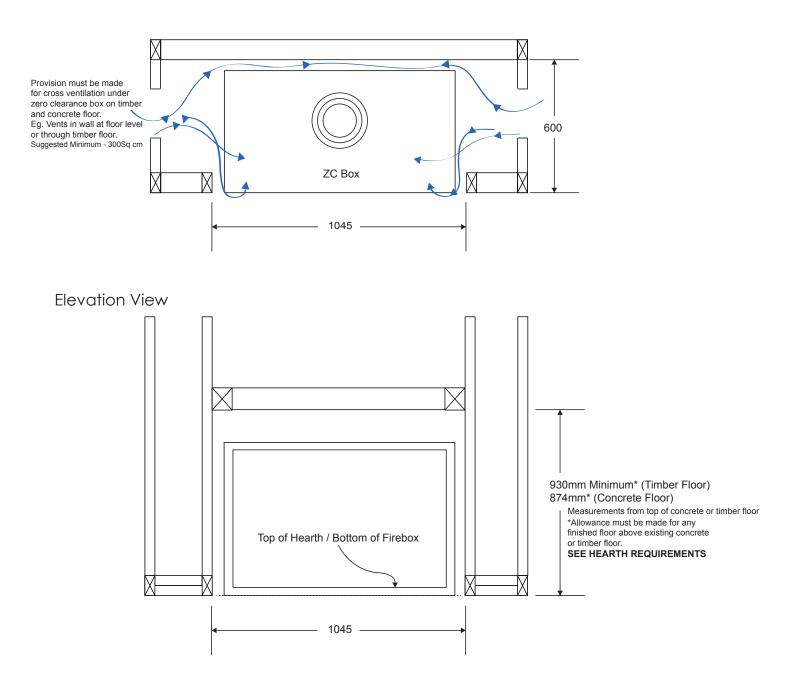

**Dimensions are subject to change at our discretion, please check with our office for further details




Hearth Requirements for Zero Clearance Box - <u>Flush Wood Only</u> <u>TIMBER FLOORS</u>

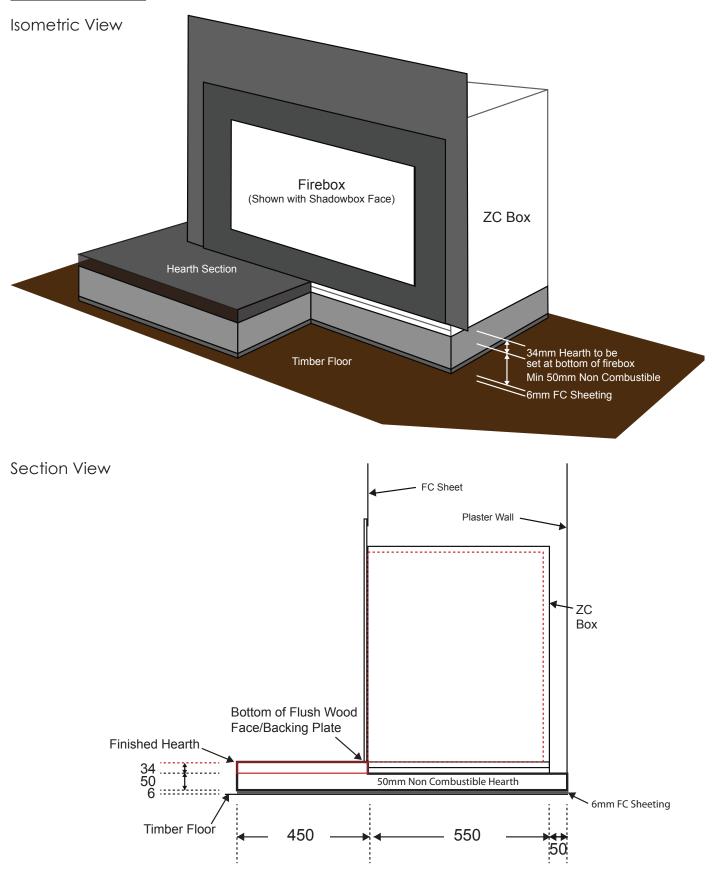




Hearth Requirements for Zero Clearance Box - <u>Flush Wood Only</u> <u>CONCRETE FLOORS</u>

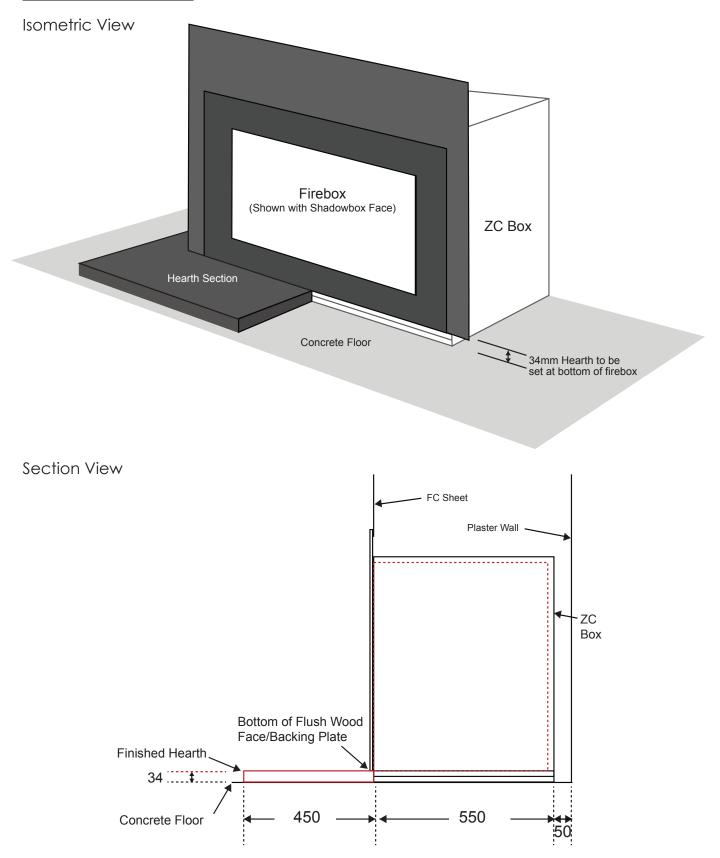



Minimum Clearances & Hearth Requirements for Zero Clearance Box - <u>Flush Wood Only</u>

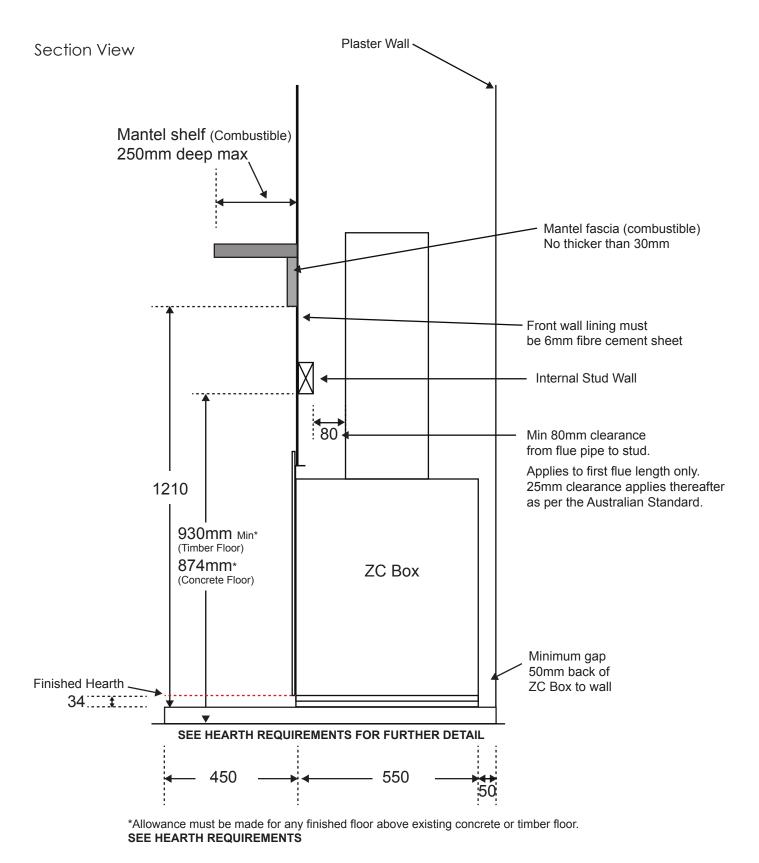

**Dimensions are subject to change at our discretion, please check with our office for further details


Dragon Wholesaling Pty Ltd | 2/16 Lexington Drive, Bella Vista NSW 2153 | Phone. (02) 8824 9122 Fax. (02) 8824 6487




Minimum Clearances & Hearth Requirements for Zero Clearance Box - <u>Flush Wood Only</u>

Plan View

Provision must be made for cross ventilation under zero clearance box on timber and concrete floor. Eg. Vents in wall at floor level or through timber floor.

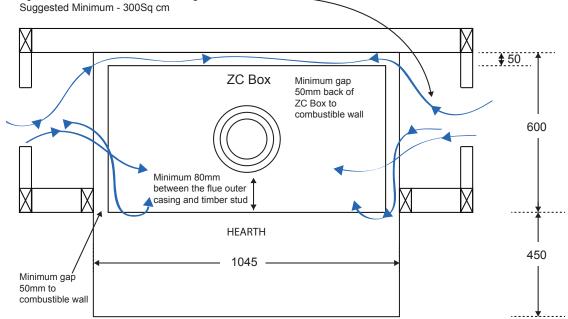

Elevation View

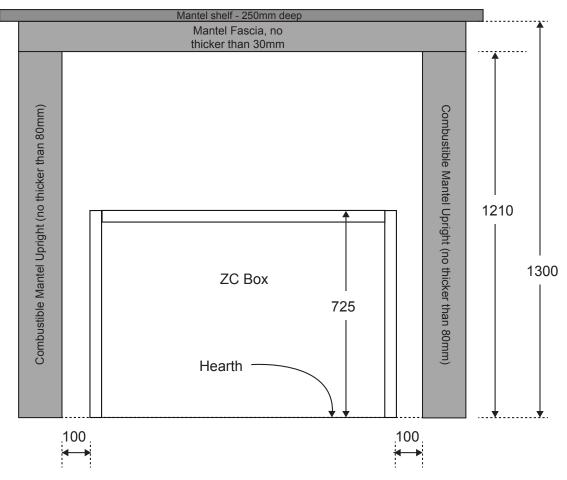

**Dimensions are subject to change at our discretion, please check with our office for further details

Dragon Wholesaling Pty Ltd | 2/16 Lexington Drive, Bella Vista NSW 2153 | Phone. (02) 8824 9122 Fax. (02) 8824 6487